



# Dinosaur Electronics

1160 SE 27th St.

Lincoln City, OR 97367

Ph. (541) 994-4344 Fax: (541) 994-2796

## Instructions for the Re-Ignitor Module Test Adapter

### Using the Adapter with the IMT 12-P Ignitor Board Tester

1. Connect the adapter to the Re-Ignitor Module as shown in **fig. 1** below.
2. Plug the adapter into the tester cable and connect the spark wire as shown.
3. Turn **ON** the tester power switch.
4. The **IGNITOR** lamp on the tester and the **PULSE** Indicator on the Adapter should **FLASH**
5. Turn the **FLAME SENSE** switch to **LOCAL**. The **IGNITOR** lamp and **PULSE** Indicator should **STOP** flashing.
6. Turn **OFF** the **FLAME SENSE** switch. The **IGNITOR** lamp and **PULSE** Indicator should start **FLASHING** again.
7. Test complete, turn **OFF** tester power.

TOP VIEW OF RE-IGNITOR (TYPICAL)



