



# Dinosaur Electronics

1160 SE 27th St.


Lincoln City, OR 97367

Ph. (541) 994-4344 Fax: (541) 994-2796


## INSTALLATION INSTRUCTIONS FOR THE MICRO P-13

Before installing your new MICRO P-13, you should take a couple of minutes to carefully inspect the refrigerator wiring and the old board for damage.

This not only protects the new board, but can save you a lot of troubleshooting time.

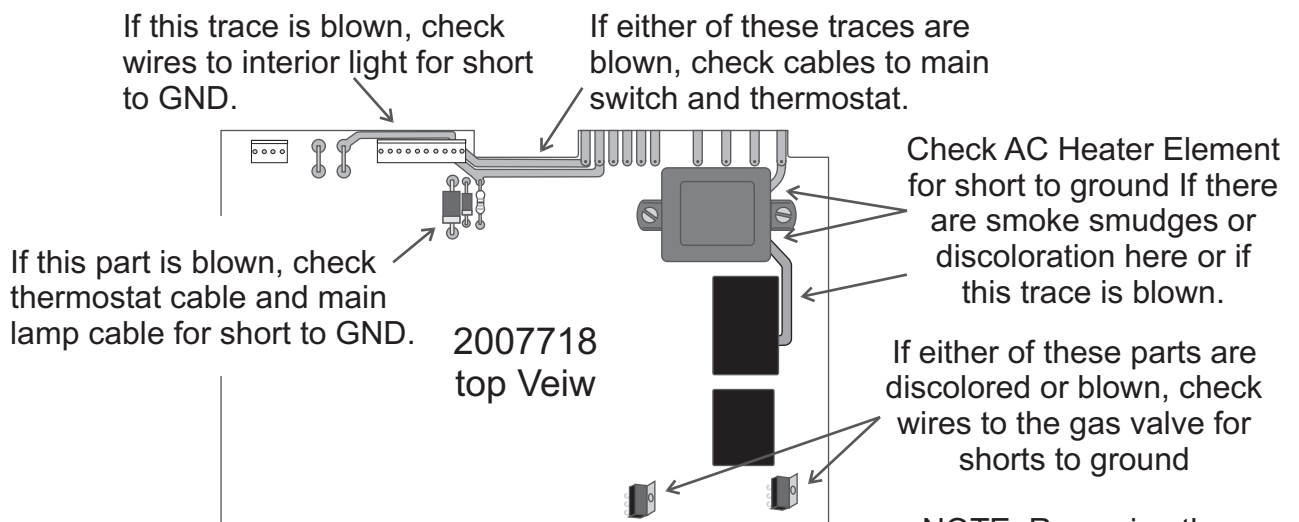





NOTE: Reversing the thermostat and gas valve wires will cause the same problem .

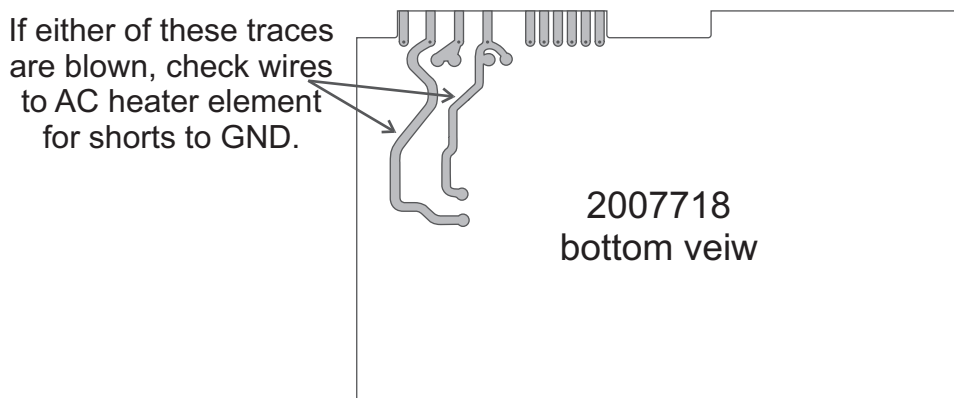

# INSTALLING THE MICRO P-13

IN THE FOLLOWING DOMETIC REFRIGERATOR MODELS:  
RM663, RM763, RM1303

CONNECTORS GO ON LIKE THIS.

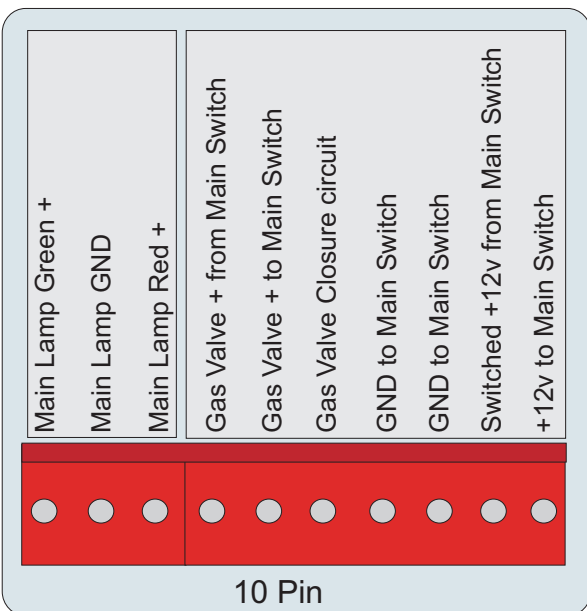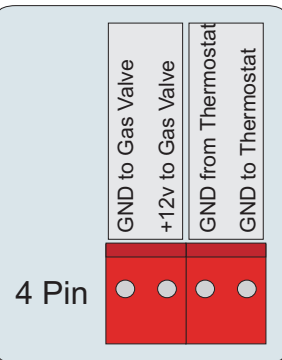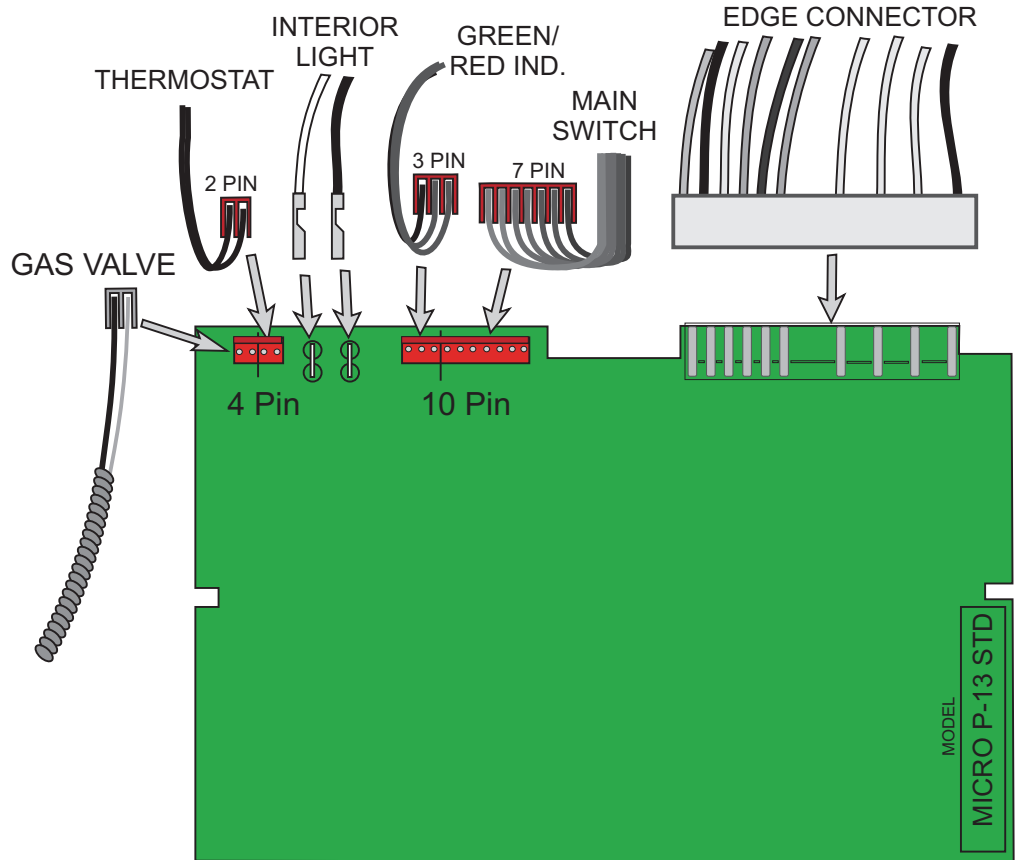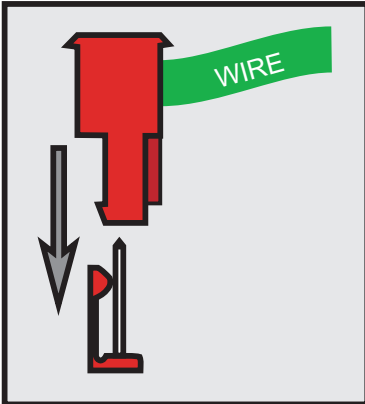

NOTE: AT THIS TIME YOU SHOULD:

1. Make sure all wires are in good condition, and routed so they are away from sharp edges.
2. If you haven't already, install a drip shield to prevent water from falling on the circuit board.

